



Fzone Music Technology Co.,Ltd

www.fzonetechnology.com

Violin Clip Tuner

VT-005

User's manual

Thank you very much for purchasing Fzone VT-005 multi-functional Tuner with a special Violin Clip. Please read this manual carefully to make sure that you use it correctly. Please keep it for future reference.

Notice for safety use

1. Overall

- Never use alcohol, petrol or other strong chemical cleaning to wipe the exterior.
- Do not crush or strike the exterior, otherwise the unit may not work properly.

2. Battery use

- Confirm the correct polarity when putting in the battery.
- Take out the battery if you are not going to use it for quite long time.
- If the unit works abnormally, please take out the battery and re-put it in after 10 seconds.
- Replace with a new battery if the LCD shows weakly.
- Dispose the used battery properly.
- In the normal shutdown, remove the battery then insert the battery will save the last shutdown, turn on the tuner requires another press on the power button.

Appearance and sketch



Detailed using instruction

Insert the battery and the tuner will be on with full LCD display with A4=440 and no flat tuning.

1 : key-press instruction

(1) Turn on/off

- Turn on: Press Power Key at the power off condition, the LCD will be lighted and the unit enters the tuner function automatically. The note accuracy indication needle is at the left and waits for tuning.
- Turn off: Keep pressing the power key at the power on condition, and then the backlight is off.
- If no operation or no signal is detected for one minute, it will turn off automatically.

(2) Mode Change:

Press power key shortly for changing: Chromatic-Guitar-Bass-Violin-Ukulele.

尺寸: 80X172MM
材质: 80g速写纸
正反面印

Tuning

- (1) Please clip the tuner onto the proper position of the instrument you wish to tune, and turn the clip for easy observation.
- (2) When the tuner detects the tone and do a judgment automatically, it will show the corresponding note name and the warp of the tone.
- (3) According to the sense of pitch showed by the tuner, it will do a estimation to the result and adjust the pitch of the instrument.
 - a. First of all, please tighten or loosen the strings so that the note displaying automatically is the same with that note produced by the instruments.
 - b. When the note name and string number are the same as the correct ones, and the "note accuracy indication needle" points to the middle of the meter, which means that the pitch is in tune.
 - c. When the note name and string number are the same as the correct ones, but the "note accuracy indication needle" points to the right part of the meter, then the pitch is higher than the standard pitch, so please adjust the instrument to make a bit lower pitch until it is in tune; on the contrary, if the "note accuracy indication needle" points to the left part of the meter, then the pitch is lower than the standard pitch, so please adjust the instrument to make a little bit higher pitch until it is in tune .

Specifications

1. Tuning mode: Chromatic/Guitar/Bass/Violin/Ukulele
2. Tuning range: B0--B7
3. A4 calibration: 440 Hz
4. Tuning way: Clip tuning automatically
5. Tolerance: ± 1 cent
6. Power: 3V CR2032 battery (one piece)

Replacing the battery

Please pay attention to the positive and negative of the battery, when open the battery cover and put in a CR 2032 battery. If there are some phenomenons like system halted and no use to the power key. please take out the battery and re-put in and then the problems will be solved.